

Shutter Release Cable

Choose 2 out of 7

Default:

Camera Brand	Camera Model No.
Canon With 3-pin jack	Canon: EOS 10D/ 20D/ 30D/ 40D/ 50D/ 5D/ 5D Mark II/ 7D/ 1D/ 1DsMark I / Mark II / MarkIII/ Mark IV
Nikon With 10-pin jack	Nikon: D1/ D1H/ D1X/ D2/ D3/ D3x/ D3s/ D2H/ D2Hs/ D2X/ D2Xs/ D200/ D300/ D300x/ D300s/ D700 Fuji: S3pro/ S5pro Kodak: DCS-14N

Optional:

Camera Brand	Camera Model No.
Canon With sub-mini jack	Canon: EOS 30/ 33 / 50/ 60D/ 300/ 300D/ 350D/ 400D/ 450D/ 500D/ 550D/ 1000D (Digital Rebel XT/ XTi/ XSi/ T1i/ T2i/ XS) Pentax: K110D/ K100D/ K200D/ K10D/ K20D/ *ist DS/ DS2/ DL2/ DL/ D Samsung: GX-1S/ GX-1L/ GX-10/ GX-20/ NX Series
Nikon With DC-2 tap	Nikon: D90/ D3100/ D5000/ D7000
Sony	Sony: a100/ a200/ a300/ a350/ a500/ a550/ a560/ a580/ a700/ a850/ a900/ SLT a33/ SLT a55
Panasonic	Panasonic:DMC-G1/ DMC-GF1/ DMC-GH1/ DMC-G2/ DMC-GH2/ DMC-G10/ DMC-L1/ DMC-L10/ DMC-FZ100
Olympus	Olympus: E520/ E510/ E420/ E410/ E400/ E450/ E620/ SP-570UZ/ SP-560UZ/ SP-550UZ/ SP-510UZ